



# DIGITAL THREE PHASE ANGLE CONTROLLER

- ▶ Allows to set the voltage applied to different sort of loads with 3 wires, 4 wires or inside the delta wiring:
  - ▶ Resistive (Bulbs, UV and IR lamps, ovens, ...),
  - ▶ Inductive (inductors, transformers, ...),
  - ▶ Motor (motorfan speed control (60 to 100% from the nominal speed),
  - ▶ Rectified (power supplies, ...).
- Small housing, easy and ready to use.
- Large mains frequency and voltage range.
- ▶ Fully optoisolated full cycle three phase phase angle controller (balanced currents, less harmonics, ...)
- Dynamic control voltage range according to the power factor of the load.
- Softstart and softstop functions (increase lifetime expectancy of the load).
- Adjustable filter regarding fast input voltage changes (ramps).
- Motor softstarting functions to control its speed within the stable area.
- Input-output transfert characteristic linearization function (resistive load).
- Diagnostic features: Status given on LED and AC/DC switches.


# **SVTA4651**




Proportionnal analog control input Potentiometric (0-5VDC)


> 200->480VAC 50A AC-51

Mains Voltage	Mains Frequency	Max AC-51 Current	Max AC-53a Current	Control Input	Status Ouputs	In / Out Insulation	Wire Size	Dimensions (WxHxD)	Weight
200 to 480VAC	40 to 65Hz	50A (with heatsink)	12A (with heatsink)	Potentiometric 0-5VDC	0 to 24VDC 1A AC/DC	4kV	In=2.5mm² Out=10mm²	100x78x56,5 (mm)	500g

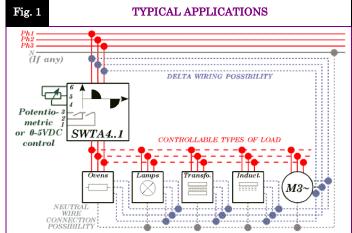

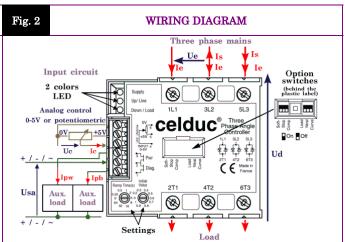

# Fig. 3 PHASE ANGLE CONTROL DESCRIPTION Load voltage Load Load current Time Load voltage Load Load current Time Firing time delay Load current Time

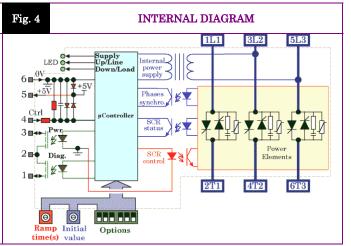

# Proud to serve you



## Page 2/6 GB

# **SETTINGS**

	Label	"Ramp Time (s)"	"Initial Value"	"Soft Stop"	"Comp"	"Load"	"Ntrl"	"Curve"
$\mathbf{s}$	Description	Ramp Time(s) 0.5 1 0.25 0 2 64 32 16	Initial Value 0.2 0.3 0.4 0.5 0.5 0 0.6 0.7 0.9 0.8					
SETTINGS AND OPTIONS	Function	Ramp up time (Softstart and smooth transients)	Initial load voltage (footstep)	Ramp down time	Allows to adapt the control signal range whatever the power factor of the load	Ask the unit to make a softstart up to the max. before analog control.	Tells the unit the load star point is connected to the mains neutral	Tells the unit what kind of in- out response to use (angle or RMS voltage linearity)
AN	Setting	Ts= 0 to 64s	Vi=0 to 100 %	0 x ts =  0,5 x ts =  ts =  2 x ts =	On (Up)	On (Up)	On (Up)	On (Up)
TTINGS	white squares = buttons Example:				Inductive load	Motor	Star wiring with neutral (4 wires)	RMS voltage control
${f SE}$					Off (Down)	Off (Down)	Off (Down)	Off (Down)
	= all switches down (OFF) (factory setting)				Resistive load	Other loads than motors	Delta or star without neutral	Phase angle control

# INPUT CHARACTERISTICS

CHARACTERISTIC	LABEL	VALUE	INFO.
Labels		"0-5V"	
Function		Analog control input	
Control type		DC control voltage	
Terminals		4, 5 & 6	
Control voltage range	Uc	0-5VDC	
Release and control threshold voltage	Ucsmin	0.15VDC	
Full power threshold control voltage	Ucsmax	4.85VDC	
Max. input voltage	Ucmax	30VDC	
Max. reverse voltage	-Ucmax	30VDC	
Input impedance	Re	1ΜΩ	See fig. 8
Best potentiometer choice		10kΩ linear	
Potentiometer range		1kΩ- >100kΩ	

#### "Diag. " "Pwr" Labels Terminals 1 & 22 & 3Indicates a problem detected Indicates the load is **Function** in the circuit configuration supplied STATUS OUTPUTS Nominal operating voltage Usan $24 \mathrm{VAC/DC}$ 0->28VAC/DC Operating voltage range Usa Max. peak voltage Usap Overvoltage protection Built-in 25V size7 varistors Minimum load current Ipw/Ipb 0A Maximum load current Ipw/Ipb 1A AC/DC See fig. 6 @100ms 10% Ipw/Ipb 2.4A AC/DC Maximum overload current of the cycle See fig. 6 On and off state switch resistance Ron / Roff $500 \text{m}\Omega$ / $100 \text{M}\Omega$ On and off time delay Ton / Toff $0.5 \mathrm{ms}$ / $2 \mathrm{ms}$



# POWER CIRCUIT

# **OUTPUT CHARACTERISTICS**


CHARACTERISTIC	LABEL	VALUE			INFO.
Mains voltage range	Ue				
Non-repetitive peak voltage	Uep		1200V		
Overvoltage protection	VDR	Built	istors		
Maximum nominal currents	Ie	Resistive Ithmax AC51	Motor Iemax AC53a	Motor Ie AC53a	See fig. 7 for limits Values with
Maximum line currents in delta wiring	ILine	50A 87A	12A 21A	8.5A 14A	heatsink Delta wiring: See installation manual
Max motor power	Pe	5.5kW @400VAC star connection			
Non-repetitive peak overload current (1 cycle of 10ms)	ITSM		550A		See fig. 8
Melting limit for choosing the protective fuses	I²t		$1500\mathrm{A}^2\mathrm{s}$		@10ms
Minimum load current	Iemin		100mA		
Maximum leakage current	Ielk		7mA		@400VAC 50Hz
Power factor	Pf		0->1		
Mains frequency range	F		40->65Hz		
Max. off-state voltage rise	dv/dt		500V/μs		
Protection against fast voltage transients			Buit-in RC network		
Max. current rise	di/dt				
On-state voltage drop	Ud		@Ith		
Resistive part of the voltage drop	rt	12mΩ			@125°C
Potential part of the voltage drop	Vto		0.9V		@125°C
Maximum junction temperature	Tjmax		125°C		
Junction/case thermal resistance per power element	Rthjc	0.45K/W			Total = 3 power elements
Case heatsink thermal resistance	Rthcs	-			
Built-in heatsink thermal resistance vertically mounted	Rthra	4K/W			<b>@</b> ΔTra=60°С
Heatsink thermal time constant	Tthra	15min			<b>@</b> ΔTra=60°C
Inputs/power ouputs insulation voltage	Uimp	4kV			
Input/status outputs insulation voltage	Uied	2.5kV			
Inputs/case insulation voltage	Uimp	4kV			
Status outputs/case insulation voltage	Uimp	$4\mathrm{kV}$			
Isolation resistance	Rio	1GΩ			
Isolation capacitance	Cio	<8pF			
Storage ambient temperature	Tstg	-40->+100°C			
Operating ambient temperature	Tamb	-40->+90°C			See fig. 7
Max. heatsink temperature	Тс	100°C			

Page 4/6 GB

				INTERNAL POWER	SUPPLY	
LY	CHARACTERISTIC	LABEL	VAI	JUE	INFO.	
INTERNAL WER SUPPI	Terminals		3L2 &			
RN	Mains voltage range	Ue	200->4	80VAC		
11.8 ER	Consumption	Is	1mA t	ypical		
NI WC	Mains frequency range	F	40-6	5Hz		
P(	Turn-on time	tm	100	ms		
				GENERAL INFOR	MATION	
	Connections		Power Input terminal block			
c c	Screwdriver advised		Posidriv 2 or 0.8 x 5.5mm			
N S	Min and max tightening torque		1.8->3N.m			
CONNECTIONS	Number and cross section of the wires		2 x 1.5->6mm <sup>2</sup> (10mm <sup>2</sup> without ferrule)	$1 \times 2.5 \mathrm{mm}^2$		
	Screwdriver for settings		0.8 x	2mm		
	Housing		UL9	4V0		
śc.	Mounting		Omega DIN rail (DI	N50022) or screwed		
MISC.	Noise level		Low audible vibrations			
	Weight		50			
				STA	NDARDS	
	Standards		EN60947-4-2 &	EN60947-4-3		
AI	Protection level		IP2	PLO		
GENERAL	Protection against direct touch		Accordin to V.D. Back hand and			
GE	CE marking		Ye	es		
	UL, cULUS and VDE approvals		Pend	ding		
	TYPE OF TEST	STANDARD	LEV	EFFECT		
ŢŢ	E.S.D. (Electrostatic discharges) EN61000-4-2		8kV 4kV (t	No effect		
I.C.	Radiated electromagnetic fields	EN61000-4-3	10V	No effect		
E.M.C. MMUNITY	Fast transients bursts	EN61000-4-4	2kV direct coupling 2kV coupling by clar	No effect		
Ĭ	Electric chocks	ectric chocks EN61000-4-5		1kV direct coupling differential mode (input and output) 2kV direct coupling common mode (input and output)		
	Voltage drop	EN61000-4-11				
E.M.C. EMISSION	Radiated and conducted disturbances	NFEN55011	The conducted or radiate solid state relays depend configuration.  The test method recommende and concerning electromagne results far from reality, we do in order to adapt their filterin Please refer to the SVTA —			

Page 5/6 GB


# CHARACTERISTIC CURVES

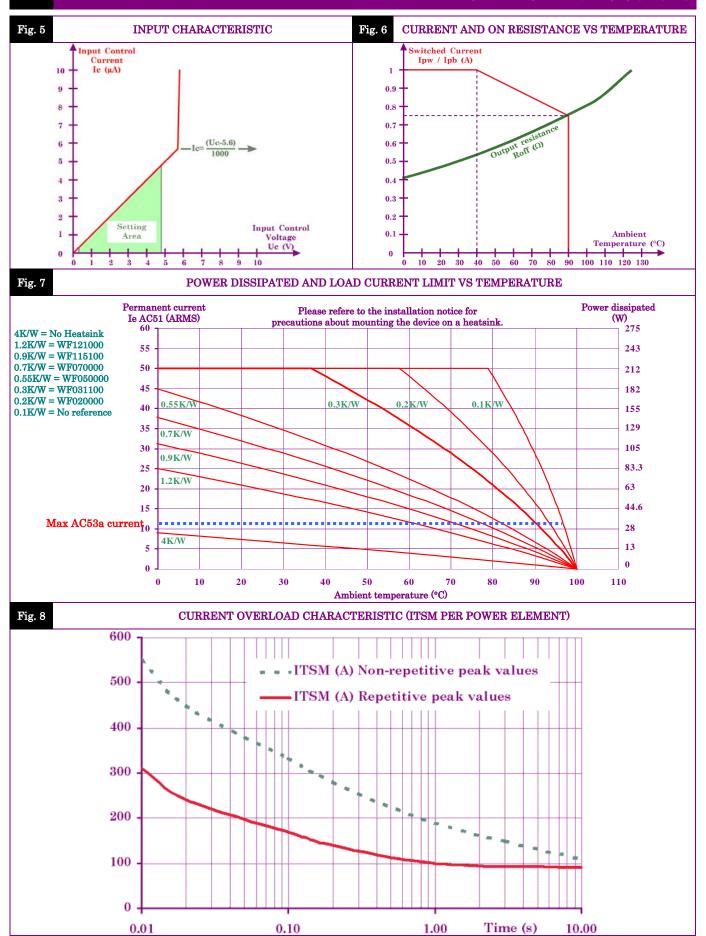



Page 6/6 GB

# DIMENSIONS AND ACCESSORIES

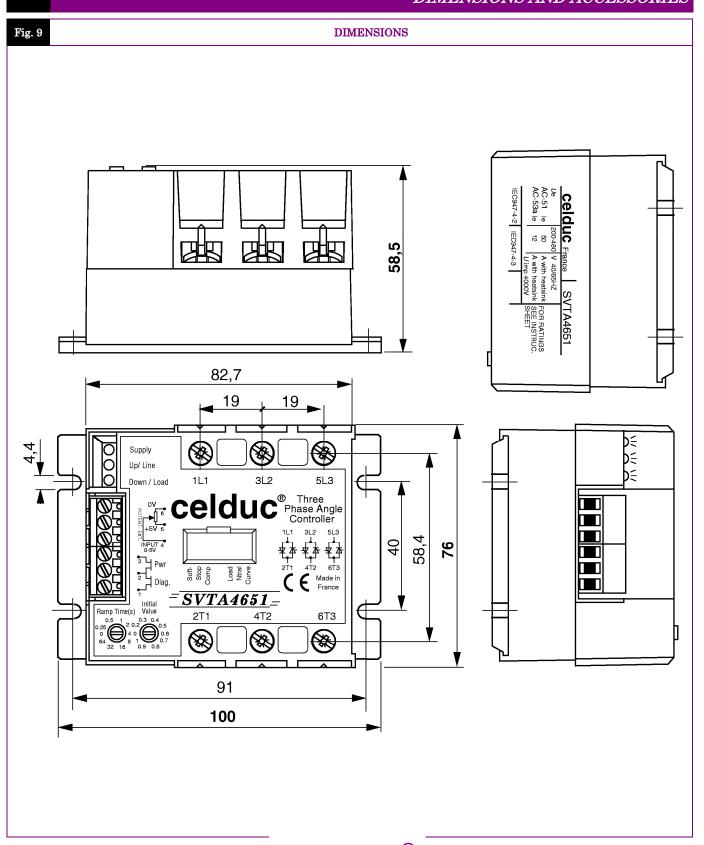



r e l a i s

www.celduc.com

5 Rue Ampère B.P. 30004 42290 SORBIERS - FRANCE E-Mail : celduc-relais@celduc.com Fax +33 (0) 4 77 53 85 51 Service Commercial France Tél. : +33 (0) 4 77 53 90 20

Sales Dept.For Europe Tel.: +33 (0) 4 77 53 90 21 Sales Dept. Asia: Tél. +33 (0) 4 77 53 90 19

# SVTA-SWTA DIAGNOSTIC

LED DISPLAY O				OUTPUTS		RMAL OPERATION					
Supply	Line Up	Load Down	Pwr	Diag.	LOAD	COMMENTS					
ANALOG INPUT VOLTAGE BELOW THE MINIMUM CONTROL VOLTAGE THRESHOLD											
0000	0000	0000	-/-	_/	OFF	Phase presence = OK; Phase voltage = OK; Phase frequency = OK LEDs blinking sequence indicates mains phase rotation is <b>direct</b> Load connected Analog input voltage below the minimum control voltage threshold (0.3V (0-10V); 4mA (4-20mA); 0.15V (0-5V / potentiometer))					
0000	0000		-/-	_/_	OFF	LEDs blinking sequence Load connected Analog input voltage be	Phase presence = OK; Phase voltage = OK; Phase frequency = OK LEDs blinking sequence indicates mains phase rotation is <b>reverse</b>				
		ANALO	OG INPU	J <b>T VOL</b>	TAGE ABO	VE THE MINIMUM CON					
					ON	Indicates the voltage at (Time ramp (s)) is incre	· ·	it or the volt	tage ramp set by the user		
$\bigcirc$		$\bigcirc$		-/-	ON	Indicates the voltage at threshold voltage (9.7V	t the analog inpu (0-10V);19.7mA	(4-20mA);4	.9V (0-5V / potentiometer))		
$\bigcirc$	$\bigcirc$	$\bigcirc\bigcirc\bigcirc$		_/_	ON		t the analog inpu		tage ramp set by the user		
$\bigcirc$	$\bigcirc$	0			ON	Stable analog input voltage or voltage ramps finished (if used)  NOTA: A fast UP/DOWN LEDs blinking can occur					
					Al	BNORMAL OPERATION					
LEI	D DISPLAY OUTPUTS LOAD DOCCUMENT GAVED										
Supply	Line Up	Load Down	Pwr	Diag.	LOAD	POSSIBLE CAUSE SOLUTION					
WHATEVER IS THE VOLTAGE VALUE AT THE ANALOG INPUT											
$\bigcirc$	0	0	_/_	_/	OFF	the motor side (2T1, 4 device, instead of the n	Mains is missing or it is connected on the motor side (2T1, 4T2, 6T3) of the device, instead of the mains side (1L1, 3L2, 5L3)		the power side wiring		
	$\bigcirc$		-/-	\ <u></u>	OFF	Mains voltage	too low	Check pha	se to phase voltage between 3L2 and 5L3		
0		0	-/-	<b>-</b>	OFF	1 or 2 phase(s) Mains frequency o Too many distu	ut of range, irbances		Check the phases		
			_/_	—	OFF	Microcontroller malf many problems at the		for a wh	t the device from the mains nile and check the wiring		
$\circ$			_\	1	OFF	Load connection Shorted thyris		the power	d connections and measure element resistance (should several 100kOhms)		
$\bigcirc$		0	_/	_/	OFF	A problem on the main phase missing) and no analog input voltag	ow it is OK but	Remove th	e analog input voltage for a while		
$\infty$			-/-	-/-	OFF	A problem on the load temporary disconnect is OK but analog in	A problem on the load occurred (e.g. temporary disconnection) and now it is OK but analog input voltage is present  Remove the analog input voltage for while				
	$\bigcirc$	$\bigcirc$			OFF	Factory diag	nostic		Consult us		
		ANALO	OG INPU	J <b>T VOL</b>	TAGE ABO	VE THE MINIMUM CON	TROL VOLTAG	GE THRES	HOLD		
			_/_	<u> </u>	OFF		Power elements can not turn on  Check connection between the control terminal block. load current is above the management of the control terminal block.		l terminal block. Check the ent is above the minimum		
$\bigcirc$		0			ON	1 or 2 phase(s) missing, Mains frequency out of range, Too many disturbances  Check the phases		Check the phases			
LEGENDE											
	$\bigcirc$						$\bigcirc$				
OFF			GREEN		RED			BLINKING OFF/RED			

## IMPORTANT INFORMATION CONCERNING THE DIAGNOSTIC

- 1- The device makes a complete diagnostic (mains, load and itself) as soon as the mains voltage is sufficient
- 2- The device checks only the presence of phases when the analog input voltage is above the minimum control threshold, during the ramps (softstart and softstop) and when it is full on (the power elements are tested only when analog control voltage is below the minimum control voltage threshold).
- 3- The control overrides the diagnostic.
  - If a problem occurs during the control period, the device will try to go on driving the load according the analog input voltage. If the problem goes on, it will be if possible indicated to the user according the diagnostic table.
  - If a problem occurs during the softstopping period, the device will stop immediately in order to reach the off state diagnostic period.

PRELIMINARY 22/01/04